

Quad Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230139 A00



20 Rue Georges Claude - ZI Les Milles
13290 Aix-en-Provence FRANCE
T. +33 (0)4 42 65 25 65 F. +33 (0)4 42 51 57 32

coppernic.fr

SAS AU CAPITAL DE 100 000 EUROS - RCS : AIX 509 059 572
SIRET : 509 059 572 00024 - APE 6201Z - TVA : FR 68 509 059 572


Quad Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230139 A00

WHAT'S IN THE BOX ?

Quad docking station for Access and RFD40 with 4 slots | DS-ACCESS-RFD40-4000

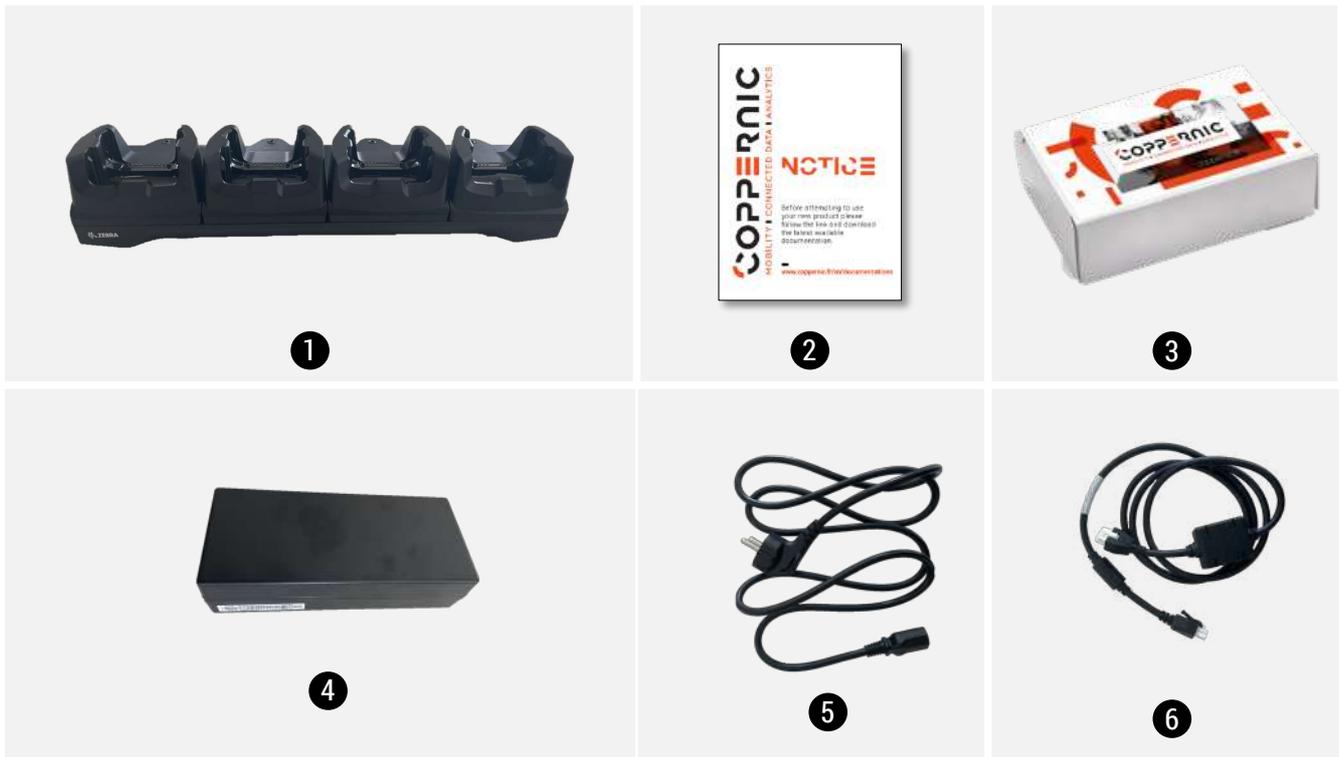

❶ 4 SLOTS DOCKING

❷ NOTICE

❸ BOX

❹ SWITCHING POWER SUPPLY

❺ POWER SUPPLY CABLE WITH EU ADAPTER

❻ DC CABLE FOR POWER SUPPLY


Quad Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230139 A00

WHAT'S IN THE BOX ?

Quad docking station for Access and RFD40 with 4 slots | DS-ACCESS-RFD40-4000

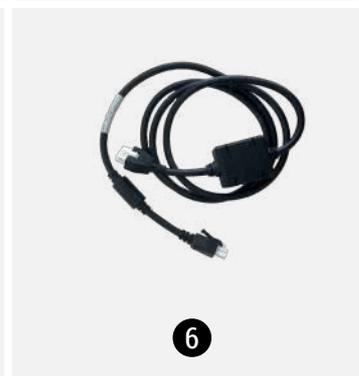

1 3 SLOTS DOCKING + 1 SLOT FOR 4xRFD40 BATTERY

2 NOTICE

3 BOX

4 SWITCHING POWER SUPPLY

5 POWER SUPPLY CABLE WITH EU ADAPTER

6 DC CABLE FOR POWER SUPPLY

Quad Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230139 A00

PRODUCT OVERVIEW

Quad docking station for Access and RFD40 with 4 slots | DS-ACCESS-RFD40-4000

Charging slots for:

- Access
- Access ER
- RFD40 Gun
- Access with RFD40 gun
- Access with Trigger



Primary
Ethernet

Power
Supply

Secondary
Ethernet

| Non-Contractual Pictures |

Quad Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230139 A00

PRODUCT OVERVIEW

Quad docking station for Access and RFD40 with 3 slots | DS-ACCESS-RFD40-4000



| Non-Contractual Pictures |

Quad Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230139 A00

Getting started

CAUTION

Use only the approved power supply (included in the box) which has been qualified with an output rated at :
SUPPLY 2.8A DC OUTPUT: 12V, 9A, 108W.

Connect Power

Quad docking station for Access and RFD40 with 4 slots | DS-ACCESS-RFD40-4000

Quad docking station for Access and RFD40 with 3 slots | DS-ACCESS-RFD40-4000

> Power supply is included in the docking station box

1. Insert the AC cable into the switching power supply and the docking station



1. Insert the power supply cable into the switching power supply and EU plug into a socket



Quad Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230139 A00

Getting started

Charge your device

Quad docking station for Access and RFD40 with 4 slots | DS-ACCESS-RFD40-4000

1. You can insert one of these devices with the battery into the slot :

- Access
- Access ER
- Access with trigger
- Access with RFD40 gun
- Gun RFD40 only



| Non-Contractual Pictures |

Quad Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230139 A00

Getting started

Charge your device

Quad docking station for Access and RFD40 with 3 slots | DS-ACCESS-RFD40-4000

1. You can insert one of these devices with the battery into the 3 slots on the right :
 - Access
 - Access ER
 - Access with trigger
 - Access with RFD40 gun
 - Gun RFD40 only
2. You can insert up to 4 RFD40 batteries into the slots on the left.



| Non-Contractual Pictures |

Quad Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230139 A00

Regulatory Information

Europe

CE

The European Economic Area (EEA)

Zebra declares that such radio equipment complies with the guidelines 2014/53/EU and 2011/65/EU.

Any limitations on radio use in EEA countries are identified in Annex A of the EU Declaration of Conformity. The full text of the EU declaration of conformity is available at : zebra.com/doc.

WEEE

Waste Electrical and Electronic Equipment (WEEE)

For customers in the European Union and the United Kingdom: For end-of-life products, please refer to the recycling/disposal guidance at : zebra.com/weee.

Importer in the European Union : Zebra Technologies B.V
Address: Mercurius 12, 8448 GX Heerenveen, Netherlands

Copyright© 2023 COPPERNIC. All rights reserved