

Single Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230143 A00



DS-ACCESS-XX-RFD40-1000



DS-ACCESS-XX-RFD40-1010

Single Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230143 A00

WHAT'S IN THE BOX ?

Single docking station for Access and RFD40 | DS-ACCESS-XX-RFD40-1000



- 1 DOCKING STATION RFD40
- 2 NOTICE
- 3 BOX
- 4 SWITCHING POWER SUPPLY
- 5 POWER SUPPLY CABLE WITH EU ADAPTER
- 6 DC CABLE FOR POWER SUPPLY


Single Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230143 A00

WHAT'S IN THE BOX ?

Single docking station for Access and RFD40 with Ethernet | DS-ACCESS-XX-RFD40-1010

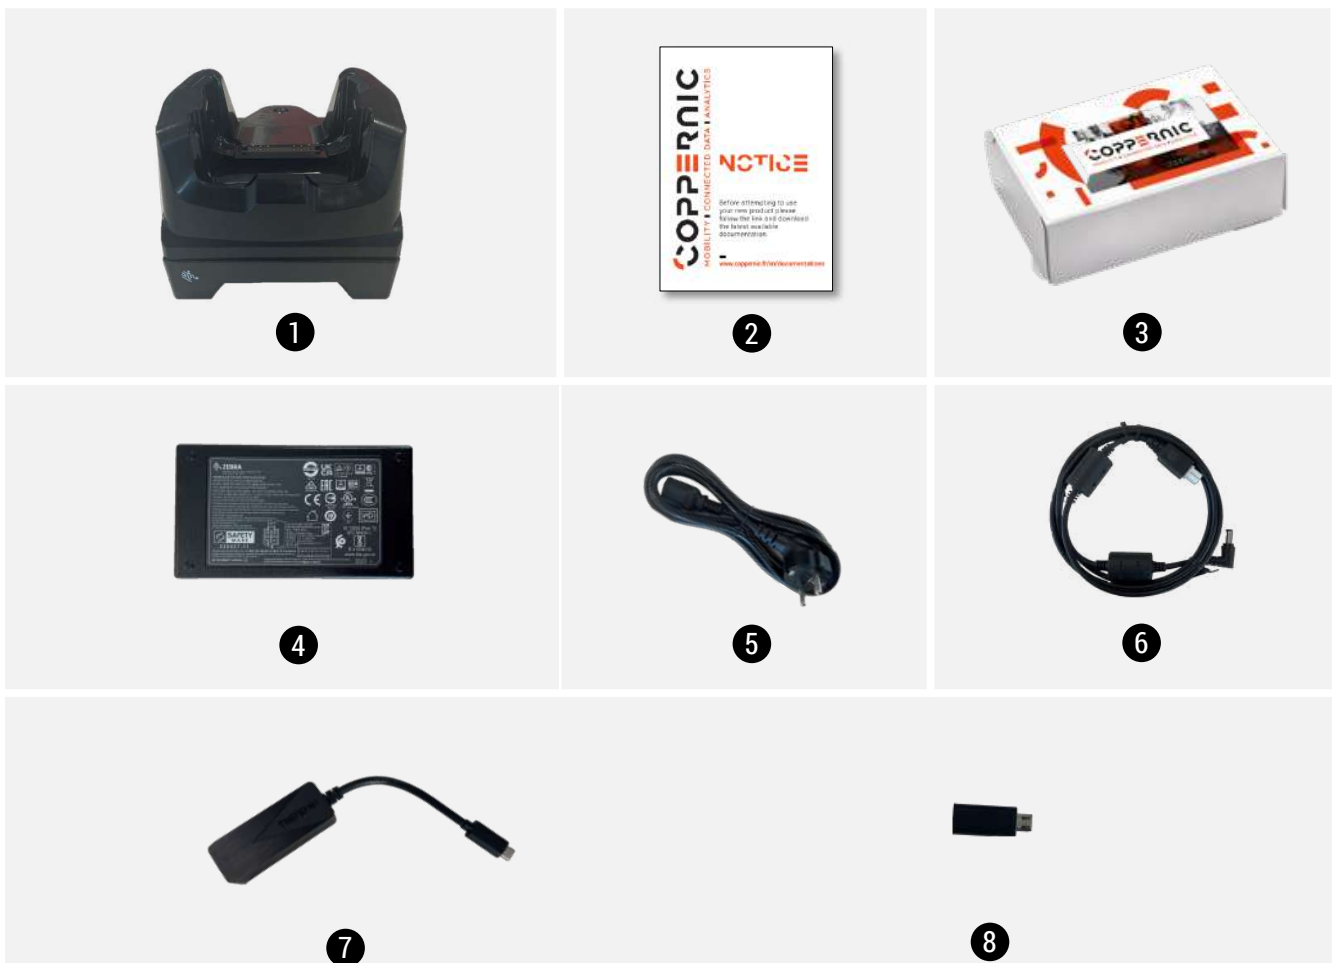

- 1 DOCKING STATION RFD40
- 2 NOTICE
- 3 BOX
- 4 SWITCHING POWER SUPPLY
- 5 POWER SUPPLY CABLE WITH EU ADAPTER
- 6 DC CABLE FOR POWER SUPPLY
- 7 USB-C / ETHERNET DONGLE
- 8 ADAPTER USB-C TO MICRO USB

Single Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230143 A00

PRODUCT OVERVIEW

Single docking station for Access and RFD40 | DS-ACCESS-XX-RFD40-1000

Single docking station for Access and RFD40 with Ethernet | DS-ACCESS-XX-RFD40-1010

FRONT VIEW

Charging slot for :

- Access
- Access ER,
- RFD40
- Access with RFD40 Gun
- Access with Trigger



BACK VIEW



Power supply

Micro-USB

| Non-Contractual Pictures |

Single Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230143 A00

Getting started

CAUTION

Use only the approved power supply (included in the box) which has been qualified with an output rated at :
SUPPLY 2.4A DC OUTPUT: 12V, 4,16A, 50W.

Connect Power

Single docking station for Access and RFD40 | DS-ACCESS-XX-RFD40-1000

Single docking station for Access and RFD40 with Ethernet | DS-ACCESS-XX-RFD40-1010

> Power supply is included in the docking station box

1. Insert the AC cable into the switching power supply and the docking station



2. Insert the power supply cable into the switching power supply and EU plug into a socket



Single Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230143 A00

Getting started

Charge your device

Single docking station for Access and RFD40 | DS-ACCESS-XX-RFD40-1000

Single docking station for Access and RFD40 with Ethernet | DS-ACCESS-XX-RFD40-1010

1. You can insert one of these devices with the battery into the slot :

- Access
- Access ER
- Access with trigger
- Access with RFD40 gun
- Gun RFD40 only



| Non-Contractual Pictures |

Single Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230143 A00

Getting started

Using Ethernet

Single docking station for Access and RFD40 with Ethernet | DS-ACCESS-XX-RFD40-1010

1. Insert the adapter USB-C to micro-USB into the USC-C / Ethernet dongle
2. You can use Ethernet by inserting the adapter into the micro-USB-C connector of the docking



| Non-Contractual Pictures |

Single Docking Station for Access and RFD40

Quick Start and Regulatory Guide

QSG 230143 A00

Regulatory Information

Europe

CE

The European Economic Area (EEA)

Zebra declares that such radio equipment complies with the guidelines 2014/53/EU and 2011/65/EU.

Any limitations on radio use in EEA countries are identified in Annex A of the EU Declaration of Conformity. The full text of the EU declaration of conformity is available at : zebra.com/doc.

WEEE

Waste Electrical and Electronic Equipment (WEEE)

For customers in the European Union and the United Kingdom: For end-of-life products, please refer to the recycling/disposal guidance at : zebra.com/weee.

Importer in the European Union : Zebra Technologies B.V
Address: Mercurius 12, 8448 GX Heerenveen, Netherlands

Copyright© 2023 COPPERNIC. All rights reserved.